

# Roger Select™

User Guide



roger



A Sonova brand

**PHONAK**  
life is on

# Contents

|   |    |
|---|----|
| <b>1. Welcome</b>   | 4  |
| <b>2. Getting to know your Roger Select</b>                       | 5  |
| 2.1 Device description  | 6  |
| 2.2 Accessories   | 8  |
| 2.3 Indicator lights  | 10 |
| <b>3. Getting started</b>   | 12 |
| 3.1 Charging your Roger microphone                                | 12 |
| 3.2 Switching Roger Select on                                     | 14 |
| 3.3 Connecting Roger Select to your hearing aids                  | 15 |
| <b>4. Using your Roger Select to hear better</b>                  | 18 |
| 4.1 Hearing better at a table                                     | 18 |
| 4.2 Hearing a distant talker better                               | 21 |
| <b>5. Listening to TV or other audio devices</b>                  | 24 |
| 5.1 Setting up the docking station                                | 24 |
| 5.2 Listening to the TV using the docking station                 | 26 |
| <b>6. Listening to a portable audio device</b>                    | 28 |
| <b>7. Making phone calls using Bluetooth® wireless technology</b> | 30 |
| 7.1 What is Bluetooth?  | 30 |
| 7.2 Pair Roger Select with your phone/computer                    | 33 |
| 7.3 Making phone calls  | 34 |
| 7.4 Further Bluetooth options                                     | 36 |

|            |  |    |
|------------|--|----|
| <b>8.</b>  | <b>Additional functions</b>                            | 38 |
| 8.1        | Mute   | 38 |
| 8.2        | Disconnecting Roger devices (NewNet)                   | 38 |
| 8.3        | Reset  | 39 |
| 8.4        | Clear list of paired Bluetooth devices                 | 39 |
| <b>9.</b>  | <b>Using Roger Select with other Roger microphones</b> | 40 |
| 9.1        | Connecting with other microphones                      | 40 |
| 9.2        | Using multiple microphones                             | 42 |
| <b>10.</b> | <b>Troubleshooting</b>                                 | 43 |
| <b>11.</b> | <b>Service and Warranty</b>                            | 48 |
| 11.1       | Local warranty   | 48 |
| 11.2       | International warranty                                 | 48 |
| 11.3       | Warranty limitation                                    | 49 |
| <b>12.</b> | <b>Compliance information</b>                          | 50 |
| <b>13.</b> | <b>Information and explanation of symbols</b>          | 54 |
| <b>14</b>  | <b>Important safety information</b>                    | 57 |
| 14.1       | Hazard warnings  | 57 |
| 14.2       | Product safety information                             | 60 |
| 14.3       | Other important information                            | 61 |

# 1. Welcome

Your Roger Select has been developed by Phonak – the world leader in hearing solutions based in Zurich, Switzerland.

This premium product is the result of decades of research and expertise and is designed to keep you connected to the beauty of sound! We thank you for making such a great choice and wish you many years of listening pleasure.

Please read the user guide carefully to make sure that you understand and get the best out of your Roger Select. For more information about features and benefits, simply contact your hearing care professional.

Phonak – life is on  
[www.phonak.com](http://www.phonak.com)


## 2. Getting to know your Roger Select

Roger Select is a microphone that picks up the voice of a speaker and sends it wirelessly directly into your ears. You can place Roger Select in the middle of a table e.g. in a restaurant, or it can be worn by a single person i.e. to hear a distant talker.




- ① Your Roger Select typically works within a range of up to 10 meters / 33 feet to your hearing aids. Note that human bodies and walls may reduce this distance. The furthest range is possible when you can see your Roger Select (i.e. line of sight).

## 2.1 Device description

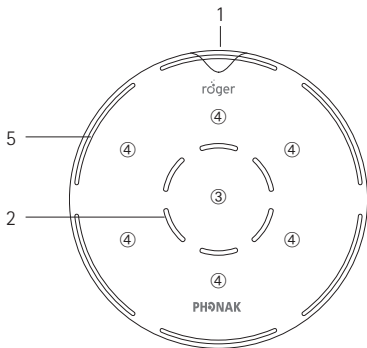


- 1 On/off button incl. battery status light
- 2 Microphones and center indicator lights
- 3 Center touch key
- 4 Six steering touch keys
- 5 Microphone mode indicator lights

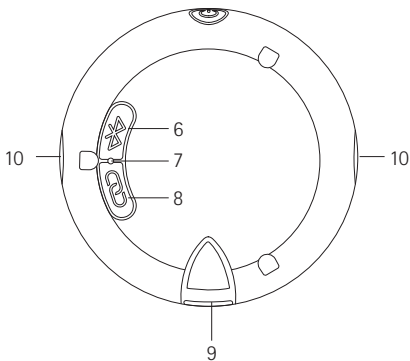


- 6 Bluetooth button
- 7 Back indicator light
- 8 Connect button
- 9 Micro-USB socket
- 10 Slots for lanyard and clip

## 2.2 Accessories

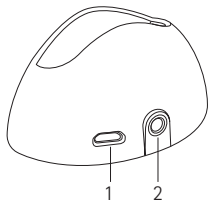


### Docking station


- 1 External power supply input
- 2 Digital/analog audio input

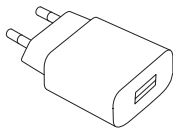

### External power supply

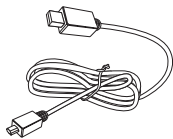


### USB cable

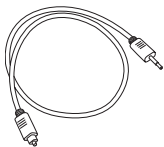


### Digital audio cable



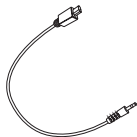


**Analog audio cable**



**Magnetic clip**




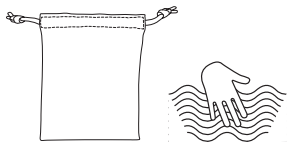

**Lanyard**




**Pouch**

## 2.3 Indicator lights

|  |                            |   |
|--|----------------------------|---|
| <b>Battery status</b><br>  | Green fast blinking        | Charging  |
|  | Green solid                | Fully charged   |
|  | Green slow blinking        | Switched on, battery full   |
|  | Orange blinking            | Battery half full   |
|  | Red blinking               | Battery empty, charge Roger Select                                      |
| <b>Microphone mode</b><br> | Green all six segments     | Microphone in all directions (all-around) active)                       |
|  | Green one to five segments | Microphone in selected directions active                                |
| <b>Mute</b><br>           | Red solid                  | Microphone muted  |
|  | Red blinking               | Unmute not possible, another Roger Select in the same network is active |

## Bluetooth

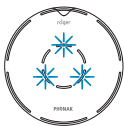

Blue slow blinking

Bluetooth standby mode

Blue double blinking

Incoming call


Blue solid

Active call

Blue fast blinking

Network issue, please press the connect button

## Connect

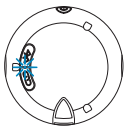

Blue blinking

Connecting or pairing mode

Solid green

Connecting / pairing successful

Red double blinking

Connect timeout, move devices closer

Red triple long blinking


Device not compatible

## 3. Getting started


### 3.1 Charging your Roger microphone

There are three ways to charge your Roger microphone:

A) Using external power supply: Plug the smaller end of the charging cable into your Roger microphone. Plug the larger end of the cable into the external power supply. Plug the external power supply into a wall outlet.

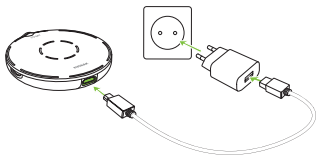

B) From computer or tablet: Plug the smaller end of the charging cable into your Roger microphone. Plug the larger end of the cable into the USB port on your computer and switch your computer on.

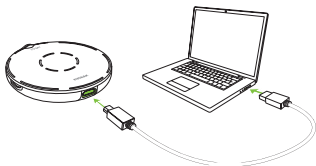


C) Via docking station: Slot the Roger Select into the docking station.

**i** Please read chapter 5.1 to setup the docking station.



### Battery status light during charging

The battery status light around the on/off button will blink green until your Roger microphone is fully charged. When fully charged the battery status light will remain solid green .




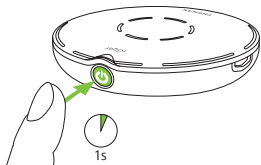
Charging



Fully charged

### 3.2 Switching Roger Select on

Press the  button 1 second until the microphone mode indicator light up.



### Battery status light after switching on

When your Roger microphone is switched on, the battery status light around the on/off button will blink softly. A green blinking light means that the battery is fully charged. A fully charged device lasts for approximately 8 hours. An orange blinking light means the battery is half full. If the indicator light starts to blink red, you should charge your Roger microphone immediately.




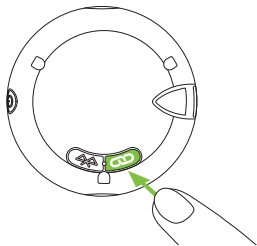
Please charge your Roger microphone

### **3.3 Connecting Roger Select to your Roger receiver**

The Roger receiver can either be attached to your hearing aid / sound processor or body-worn (Roger NeckLoop or Roger X plugged into your streamer).

Your hearing care professional may already have connected your Roger microphone to your Roger receiver(s). If this is not the case, connect the Roger receiver(s) as follows:

1. Turn on your Roger microphone and Roger receiver.
2. Hold your Roger microphone close (within 10 cm / 4 inches) from the Roger receiver.
3. Press the Connect button  on your Roger microphone.



The back indicator light will turn green for two seconds to confirm a successful connection.



## Connect status lights

After pressing the Connect button, the following feedback may be given by the back indicator light:



Connecting

---



Connection was successful – your Roger receiver is connected to your Roger microphone.

---



Your Roger microphone could not find a Roger receiver. Move the devices closer to your Roger receiver and make sure the Roger receiver is powered on. Then try to connect again.

---



The Roger receiver is not compatible with your Roger microphone.

---

**i** You can connect an unlimited number of Roger receivers to your Roger microphone, simply repeat step 2 and 3 for any other Roger receiver.

## 4. Using your Roger Select to hear better

Roger Select is a versatile, intelligent product. It detects which situation you are in and adapts its microphone settings automatically to provide you the best speech understanding possible.

- ① For best speech understanding, always bring your Roger microphone as close to the conversation partner(s) as possible.

### 4.1. Hearing better at a table

Place your Roger microphone in the middle of a table to listen to a group of people.



Your Roger microphone will activate an all-around microphone. When a talker speaks, your Roger microphone will focus its microphone to the talker and reduce the background noise.

If two or more people are speaking at the same time, you may tap a segment to focus on a specific person.



You can add other people by tapping additional segments.



Tapping an activated segment again will deactivate the selected direction.



To hear the whole group again, tap the center touch key.



## Microphone mode indicator lights

Each time you tap or move the device, the microphone mode indicator lights shows the active segments. The lights will fade out after a couple of seconds to save battery power.



All six directions are active




Selected directions active only

- i** In case there is no table, you can also hold your Roger microphone in your open palm. You can use the same functions as if it would be on the table.

## 4.2 Hearing a distant talker better


Roger Select allows you to hear a single conversation partner over distance or in very noisy environments. In typical conditions, you may hear the talker even if they are 10 meter/30 feet away from you.

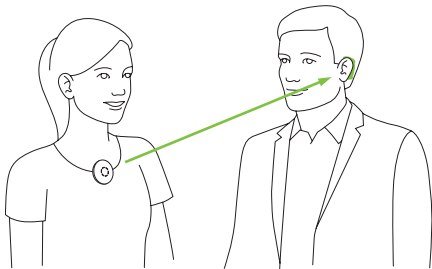


Attach the clip or lanyard before you give the device to the talker. Your Roger microphone automatically activates the appropriate microphone mode.

## Using the clip


- 1) Attach the clip to your Roger microphone. Make sure the clip clicks into the small slots on the side of your Roger microphone.




- 2) Open the magnetic clip.



- 3) Attach the clip to the talker's shirt.

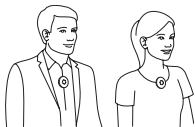


For best results, make sure your Roger microphone is worn in the middle of the chest, approx. 20 cm/8 inches from the mouth.

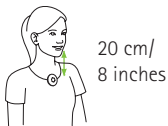

## Using the lanyard

- 1) Attach the lanyard to your Roger microphone. Make sure the lanyard clicks into the small slots on the side of your Roger microphone.
- 2) Hang the lanyard around the neck of the talker and adjust the length so that your Roger microphone is within 20 cm/8 inches of the mouth.

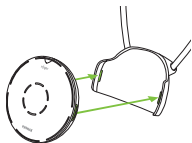


## Microphone mode indicator lights

When Roger Select is worn by a talker, the top microphone mode indicator light will light up.



## Removing the clip or lanyard


Press one side of the clip or lanyard to detach it from your Roger microphone.

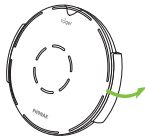

## 5. Listening to TV or other audio devices


### 5.1 Setting up the docking station

- 1) Insert the smaller end of the USB cable into the socket of the docking station.
- 2) Insert the larger end of the USB cable in the external power supply.
- 3) Plug the external power supply into the wall outlet.

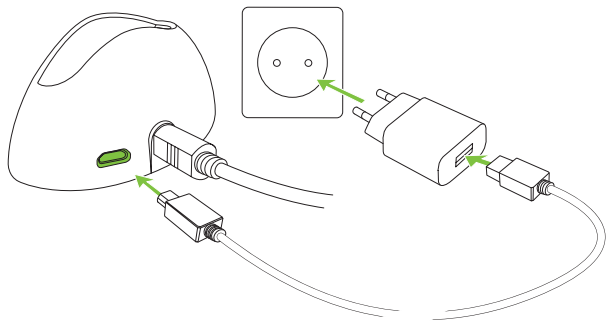



- 4) Connect the free end of the optical (Toslink) cable into the optical OUTPUT of your TV or alternative audio device.

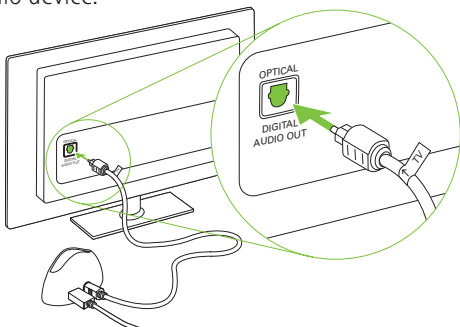

**i** If your TV or alternative audio device does not have optical audio output, you can alternatively use an analogue audio cable for connection between the TV and the docking station. The maximum audio output is 1.4 Vrms, higher audio input voltage may damage the device.

**i** Protect your eyes of the optical light from the optical Toslink cable when plugged into the device or TV.


## 5.2 Listening to the TV using the docking station

1) Insert your Roger microphone into the docking station. When it is placed into the docking station, it will automatically turn off.



2) Switch on your TV (or alternative audio device). Your Roger microphone will automatically transmit the audio signal to your ears.

To end the transmission of the audio signal, simply switch off the TV (or alternative audio device) or take your Roger microphone out of the docking station.

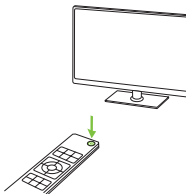


- i** The internal microphones of Roger Select will be muted when audio is transmitted. By pressing the center touch key, you can activate/deactivate the microphones of your Roger microphone (omnidirectional mic only).


## Mute indicator lights

When your Roger microphone is placed in the docking station and transmitting audio, the center red indicator light appears.

Your Roger microphone transmits audio signals while its microphone is muted.

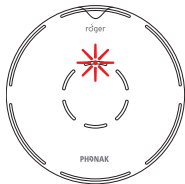


While transmitting audio, your Roger microphone also sends its microphone signal in parallel.

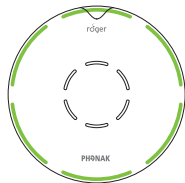

## 6. Listening to a portable audio device

- 1) Make sure you have switched on your Roger microphone.
- 2) Plug the rectangular end of the short audio cable into your Roger microphone.
- 3) Plug the round end of the short audio cable into the headphone output of your portable device.
- 4) Start the music or music app on your portable audio device.

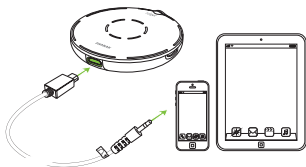


**i** Your Roger microphone will automatically mute when you plug the audio cable. You can activate the microphone by pressing the center touch key. Now you will hear the audio device and microphones in parallel.

To end the transmission of the audio signal, simply unplug the audio cable or switch your Roger microphone off.


## Mute indicator lights

When the audio cable is plugged into your Roger microphone, the center red indicator light appears.

Your Roger microphone transmits audio signals while its microphone is muted.

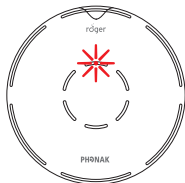

While transmitting audio, your Roger microphone also sends its microphone signal in parallel.

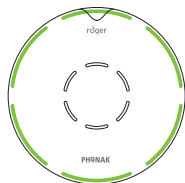


## 7. Making phone calls using Bluetooth® wireless technology

Roger Select allows you to connect to Bluetooth wireless technology enabled products such as cell phones, smartphones, landline phones, tablets and computers to make and receive phone calls.

### 7.1 What is Bluetooth?

Bluetooth provides a way to make phone calls with Bluetooth wireless technology enabled devices.

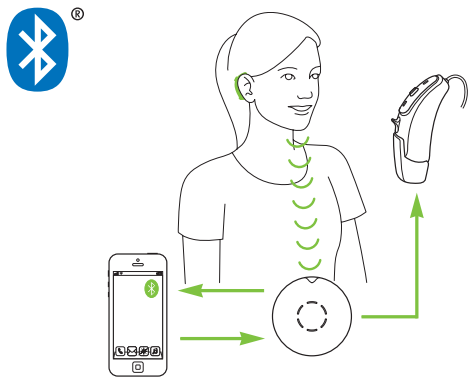

## **What Bluetooth devices can I use with my Roger Select?**

First, check whether the device you wish to use has Bluetooth wireless technology. Look for the Bluetooth symbol on the device or in its user guide.

Second, the possible applications of a Bluetooth device are defined by 'profiles'. The device you wish to use with your Roger microphone must support either the 'Headset' or 'Hands Free' profile (HS /HFP).

### **Bluetooth device compatibility**

If a problem occurs with the connection between your Bluetooth device and your Roger microphone, or if you are unsure about your device's Bluetooth capabilities, please consult your device's user guide or ask your dealer.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sonova Communications AG is under license. Other trademarks and trade names are those of their respective owners.

## **Bluetooth operating range**

Your Roger microphone supports Bluetooth Class 2 operation up to a range of 3 meters (10 ft).


Line-of-sight between your Roger microphone and your phone/computer is not required. However, the following factors may negatively affect the range achieved:


- Interference with other devices in the environment.
- The Bluetooth device with which you are connecting may only support a more limited range.




## 7.2 Pair Roger Select with your phone/computer

- 1) Turn on your Roger microphone and your phone/computer. Place them next to each other.
- 2) Ensure that your phone's/computer's Bluetooth setting is enabled.
- 3) On your phone/computer choose SEARCH or SCAN to search for Bluetooth devices or audio enhancements.

- 4) To initiate the pairing process on your Roger microphone, press the Bluetooth button  for 2 seconds until the back indicator light fades in blue. Then briefly press the Bluetooth button again and the back indicator light starts to blink blue.

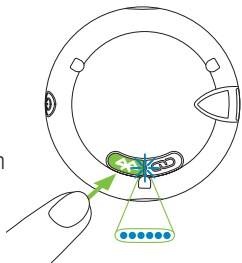

- 5) Your phone/computer should present a list of the Bluetooth devices it has detected. Choose Roger Select from this list and confirm that you want to establish a connection.


- 6) Your Roger microphone should now be paired to your phone/computer and the indicator light will stop blinking.
- 7) To add another Bluetooth device, briefly press the Bluetooth button  until the back indicator light starts to blink blue again and repeat step 2 to 6.

**i** Your phone/computer may then ask you to enter a passcode. If so, enter '0000' (four zeros). Some phones/computers may ask which Bluetooth service you want to enable, select Headset audio device and microphones in parallel.

## 7.3 Making phone calls

### Accepting incoming calls

When you receive a phone call, your Roger microphone Bluetooth light indicator will start flashing blue. To accept an incoming call, press the center touch key.

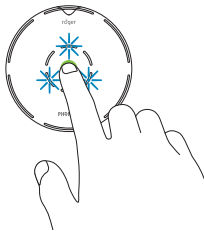


## **Making phone calls**

Use your phone's/computer's keypad to enter the number or the contact you want to call and press the call button. You will hear the ringing tone in your hearing aids shortly afterwards.

## **Speaking into your Roger microphone during the call**

For best results it is recommended to wear your Roger microphone on your chest during the phone call.

Alternatively, you can place your Roger microphone on the table in front of you.

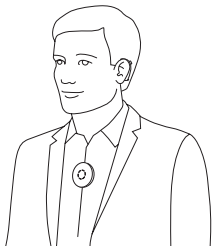

## **Ending a phone call**

To end a call, tap and hold the center touch key or end the call on your phone device.

## **Rejecting a call**

If you prefer not to answer an incoming call, tap and hold the center touch key for 2 seconds until the blue light stops flashing. Using your phone/computer to reject the call will have the same effect.

## **Mute call**

To mute your voice, tap the center touch key. The red mute indicator light will light up.

## **7.4 Further Bluetooth options**

### **Keeping Roger Select in Bluetooth standby mode**


Once you have paired your Roger microphone with a Bluetooth device, its Bluetooth feature will be enabled. Now you have two options to switch off your Roger microphone:


- A. Press and hold the on/off button will switch off your Roger microphone and the Bluetooth feature. You will not be able to make a phone call. When you switch on your Roger microphone again, Bluetooth will also be enabled again.

- B. Briefly pressing the on/off button will put your Roger microphone into Bluetooth standby mode. This means your Roger microphone is switched off but you can still receive an incoming phone call.

① In Bluetooth standby mode, the battery of your Roger microphone is drained. It is recommended to switch off your Roger microphone completely if you are not expecting to make phone calls.

## Disabling / Enabling Bluetooth


If you are not using your Roger microphone's Bluetooth function for a long time, you can disable Bluetooth by pressing and holding the Bluetooth button  for two seconds until the blue back indicator light fades off.

To re-activate Bluetooth, press and hold the Bluetooth button  for two seconds until the blue back indicator light fades on.

## 8. Additional functions

### 8.1 Mute


To mute the your Roger microphone, tap the center touch key of the device once or twice until the center red indicator light appears.

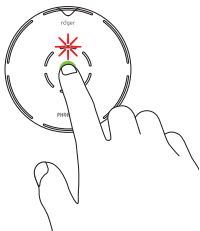

Tap the center touch key to re-activate Roger Select's microphone.

**i** When the device is worn by a talker, the mute function cannot be used.



### 8.2 Disconnecting Roger devices (NewNet)

To disconnect your Roger microphone from any  connected receivers or other Roger microphones, hold the Connect button for 7 seconds. The back indicator light will turn orange when your Roger microphone has been disconnected from all connected devices.

### 8.3 Reset


If your Roger microphone stops responding to commands, you can reset it by pressing the on/off and Bluetooth buttons together for 10 seconds.

### 8.4 Clear list of paired Bluetooth devices

To disconnect your Roger microphone from all paired Bluetooth devices, press and hold the Connect button  and Bluetooth button  for seven seconds. The back indicator light will turn orange when the list of paired Bluetooth devices has been cleared.

## 9. Using Roger Select with other Roger microphones

Roger Select can be combined with other Roger microphones, e.g. Roger Table Mic II. Using multiple microphones allows you to hear a bigger group or multiple distant speakers.

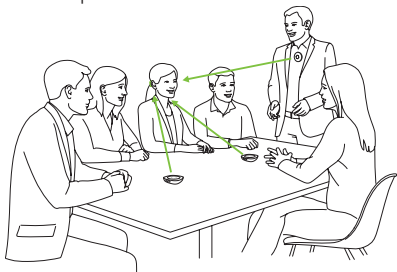


### 9.1. Connecting with other microphones

To connect another microphone to your Roger Select, follow these steps:


- 1) Turn on both microphones.
- 2) Hold the two microphones close together (within 10 cm/4 inches).
- 3) Press the Roger Select's Connect button.



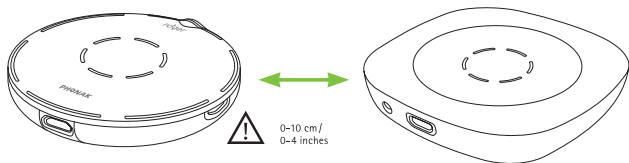


## Connect status light


After pressing the Connect button, the following feedback may be given by the back indicator light:

- 
-  Connection was successful - the other Roger microphone is now connected to your Roger Select.

---

  -  Roger Select could not find another Roger microphone. Move Roger Select closer to the other Roger microphone and make sure both microphones are switched on. Then try Connect again.

---

  -  The other Roger microphone is not compatible with your Roger Select or the other Roger Select's Bluetooth is still enabled. Please update the software of your Roger microphones or disable Bluetooth on the secondary Roger Select.
-

## **9.2. Using multiple microphones**

When Roger Select is used with other microphones, it has to be worn by a talker on the chest. When you place Roger Select on the table, it will mute automatically. Unmuting Roger Select will mute the other microphones that are connected with the Roger Select. Muting Roger Select or wearing it on the chest will reactive the other microphones again.

## 10. Troubleshooting

| <b>Problem</b>                         | <b>Causes</b>   | <b>Solutions</b>   |
|--|---|--|
| I cannot switch my Roger microphone on | The battery is empty  | Charge your Roger microphone for at least two hours  |
| I cannot hear from my Roger microphone | Your Roger microphone is muted (red LED)                        | Unmute your Roger microphone by pressing the center touch key  |
|  | Wrong direction is selected                                     | Tap on the segment that is in the direction of the talker  |
|  | Your Roger receivers are not connected to your Roger microphone | Hold your Roger microphone close to each Roger receiver or Roger compatible hearing aid and press the Connect button |
|  | Your Roger receiver is not working                              | Make sure you have attached the Roger receiver to your hearing aid and that it is powered on                         |
|  | Your hearing aids are not set to the correct program            | Check that your hearing aids are set to the correct program (Roger/FM/DAI/EXT)                                       |

| <b>Problem</b>   | <b>Causes</b>   | <b>Solutions</b>   |
|--|---|--|
| I can hear the talker but I cannot understand what he / she says | The microphone is too far from the talker                 | Move your Roger microphone closer to the talker's mouth                                |
|  | The microphone openings are covered by fingers            | Hold the microphone in a way that the microphone openings are not covered              |
|  | The microphone openings are covered by dirt               | Clean the microphone openings  |
|  | Wrong direction is selected                               | Tap on the segment that is in the direction of the talker                              |
| I keep losing the audio signal                                   | Distance between you and your Roger microphone is too far | Move closer to your Roger microphone   |
|  | There are obstacles between you and your Roger microphone | Try to be line of sight to your Roger microphone or go closer to your Roger microphone |
| I hear too much noise  | Noise is picked up by your Roger microphone               | Tap the segment in the direction of the talker to reduce background noise              |

| <b>Problem</b>   | <b>Causes</b>                                    | <b>Solutions</b>   |
|--|--|--|
| I do not like to hear my own voice over my Roger microphone                      | Your voice is picked up by your Roger microphone | Tap the segment in the direction of the talker to minimize your own voice pickup                     |
| The volume of my multimedia device is too low                                    | Incorrect volume settings                        | Increase volume of your audio source   |
| I cannot hear my multimedia device   | The audio source is muted                        | Unmute the audio source  |
|  | your Roger microphone is switched off            | Switch on your Roger microphone  |
|  | The audio cable is not plugged correctly         | Plug the audio cable correctly   |
| My Roger microphone has stopped working and does not react to any button presses | Software issue                                   | Reboot your Roger microphone by simultaneously pressing the on/off and Connect button for 10 seconds |
|  | A code is required to pair your Roger microphone | Roger Select pairing code is '0000' (four zeros)   |
| My Roger microphone does not pair with the cell phone                            | Your phone may not support your Roger microphone | Ask your phone dealer if your phone is compatible with your Roger microphone's Bluetooth version     |

| <b>Problem</b>   | <b>Causes</b>  | <b>Solutions</b>  |
|--|--|---|
| I keep losing the signal during a Bluetooth phone call               | Distance between your Roger microphone and your phone/ computer is too far     | Move your phone/ computer closer to your Roger microphone   |
| I receive a call but I cannot accept the call on my Roger microphone | The phone's Bluetooth is disabled  | Enable your phone's/ computer's Bluetooth feature (see your device's user guide)                          |
|  | Your Roger microphone's Bluetooth is disabled                                  | Enable Bluetooth by pressing the Bluetooth button for 2 seconds.  |
|  | The distance between your Roger microphone and your phone/ computer is too far | Bring your phone/ computer and your Roger microphone closer together                                      |
| The caller can hear me but I cannot hear the caller                  | The call is not forwarded to your Roger microphone                             | Press the Bluetooth or headset icon on your phone/computer to transfer the phone to your Roger microphone |

| <b>Problem</b>  | <b>Causes</b>                                    | <b>Solutions</b>   |
|---|--|--|
| The person on the phone is having difficulty hearing me | your Roger microphone is too far from your mouth | Wear your Roger microphone on your chest or place it on the desk in front of you |
|   | Your Roger microphone is muted                   | Tap the center touch key to unmute your Roger microphone                         |

## 11. Service and warranty

### 11.1 Local warranty

Please ask the hearing care professional, where you purchased your devices, about the terms of the local warranty.

### 11.2 International warranty

Phonak offers a one year limited international warranty, valid as of the date of purchase. This limited warranty covers manufacturing and material defects. The warranty is valid only if proof of purchase is shown.

The international warranty does not affect any legal rights that you might have under applicable national legislation governing sale of consumer goods.



### 11.3 Warranty limitation

This warranty does not cover damage from improper handling or care, exposure to chemicals, immersion in water or undue stress. Damage caused by third parties or non-authorized service centers renders the warranty null and void. This warranty does not cover any services performed by a hearing care professional in his/her office.

Serial number: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

Authorized hearing care professional  
(stamp/signature):

## 12. Compliance information

### Europe:

#### Declaration of Conformity

Hereby Sonova Communications AG declares that this product is in compliance with the Radio Equipment Directive 2014/53/EU. The full text of the EU Declaration of Conformity can be obtained from the manufacturer or the local Phonak representative or at [www.phonak.com](http://www.phonak.com)

Operation frequency: 2400 – 2483.5 MHz

Power level: < 100 mW

### Australia/New Zealand:



**R-NZ**

Indicates a device's compliance with applicable Radio Spectrum Management's (RSM) and Australian Communications and Media Authority (ACMA) regulatory arrangements for the legal sale in New Zealand and Australia. The compliance label R-NZ is for radio products supplied in the New Zealand market under conformity level A1.

**Notice 1:**

This device complies with Part 15 of the FCC Rules and with Industry Canada's license exempt RSS standard(s).

Operation is subject to the following two conditions:

- 1) this device may not cause interference, and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

**Notice 2:**

Changes or modifications made to this device not expressly approved by Sonova Communications AG may void the FCC authorization to operate this device.

**Notice 3:**

The device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and ICES-003 of Industry Canada.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

The device generates uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Notice 4:**

Japanese Radio Law Compliance. Business Law Compliance. This device is granted pursuant to the Japanese Radio Law (電波法) and the Japanese Telecommunications Business Law (電気通信事業法). This device should not be modified (otherwise the granted designation number will become invalid).

**Notice 5:**

FCC / Industry Canada RF Radiation Exposure Statement  
This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## 13. Information and explanation of symbols



The CE symbol is confirmation by Sonova Communications AG that this product is in compliance with the Radio Equipment Directive 2014/53/EU.

---



This symbol indicates that it is important for the user to read and take into account the relevant information in this user guide.

---



Indicates the device manufacturer.

---



This symbol indicates that it is important for the user to pay attention to the relevant warning notices in this user guide.

---



Important information for handling and product safety.

---

## Operating conditions

The device is designed such that it functions without problems or restrictions if used as intended, unless otherwise noted in this user guide.

---



Temperature transport and storage:  $-20^{\circ}$  to  $+60^{\circ}$  Celsius ( $-4^{\circ}$  to  $+140^{\circ}$  Fahrenheit). Temperature operation:  $0^{\circ}$  to  $+40^{\circ}$  Celsius ( $+32^{\circ}$  to  $+104^{\circ}$  Fahrenheit).

---



Keep dry.

---



Humidity during transportation and storage:  $<90\%$  (non-condensing). Humidity operation:  $<90\%$  (non-condensing).

---



Atmospheric pressure: 200 hPa to 1500 hPa.

---



This symbol on the product or its packaging means that it should not be disposed of with your other household waste. It is your responsibility to dispose of your waste equipment separately from the municipal waste stream. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. This product has an embedded, nonreplaceable battery. Do not attempt to open the product or remove the battery as this may cause injury and damage the product. Please contact the local recycling facility for removal of the battery.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Phonak Communication AG is under license. Other trademarks and trade names are those of their respective owners.

---



---

## 14. Important safety information

Please read the information on the following pages before using your device.

### 14.1 Hazard warnings

- ⚠ This device is not for children below 36 months. It contains small parts that can cause choking, if swallowed by children. Keep out of reach of children and mentally challenged people or pets. If swallowed, consult a physician or hospital immediately.
- ⚠ The device may generate magnetic fields. If any influence of the Roger Select on the Implantable Device (e.g. pacemakers, defibrillators, etc.) is experienced, stop using the Roger Select and contact your doctor and /or the manufacturer of the Implantable device for advice.

- ⚠ Use only hearing aids that have been specially programmed for you by your hearing care professional.
- ⚠ Dispose of electrical components in accordance with your local regulations.
- ⚠ Changes or modifications to any of the devices that were not explicitly approved by Sonova Communications AG are not permitted.
- ⚠ Only use accessories approved by Sonova Communications AG.
- ⚠ The charger provided by Sonova Communications AG can be used for charging Roger Select up to 5000m altitude. For safety reasons, only use chargers supplied by Sonova Communications AG or certified chargers with a rating of 5VDC, max. 2000 mA and up to a maximum altitude of 2000m.

- ⚠ Do not use the device in explosive areas (mines or industrial areas with danger of explosions, oxygen rich environments or areas where flammable anesthetics are handled) or where electronic equipment is prohibited.
  
- ⚠ Opening the device might damage it. If problems occur which cannot be resolved by following the remedy guidelines in the troubleshooting section of this user guide, consult your hearing care professional.
  
- ⚠ When operating machinery, ensure that no parts of your device can get caught in the machine.
  
- ⚠ Do not charge device while it is on your body.

## 14.2 Product safety information

- ① Protect the device connectors, plugs, power supply from dirt and debris.
- ① Do not use excessive force when connecting your device to its different cables.
- ① Protect the device from excessive moisture (bathing or swimming areas) and heat sources (radiator). Protect the device from excessive shock and vibration.
- ① Clean the device using a damp cloth. Never use household cleaning products (washing powder, soap, etc.) or alcohol to clean them. Never use a microwave or other heating devices to dry the device.
- ① X-ray radiation, CT or MRI scans may destroy or adversely affect the correct functioning of the device.

- ① If the device has been dropped or damaged, if it overheats, has a damaged cord or plug, or has been dropped into liquid, stop using your device and contact authorized service centre.

### 14.3 Other important information

- ① Protect your eyes of the optical light from the optical Toslink cable when plugged into the device or TV.
- ① High-powered electronic equipment, larger electronic installations and metallic structures may impair and significantly reduce the operating range.
- ① Device collects and stores internal technical data. This data may be read by a hearing care professional in order to check the device, as well as to help you use your device correctly.
- ① The digital signal sent from the device to a connected receiver cannot be overheard by other devices which are not in the microphone's network.







Sonova Communications AG  
Herrenschwandweg 4  
CH-3280 Murten  
Switzerland  
[www.phonak.com](http://www.phonak.com)

**sonova**  
HEAR THE WORLD



029-0550-02/N4.00/2021-06/erc © 2021 Sonova AG All rights reserved